

CSS SQ Spring replacement


1. Please open the four screws to remove the Shifter plate (Figure A)

Figure A




2. Don't remove the plate completely yet; you will have to unplug one cable first before you can remove it completely (Figure B)

Figure B

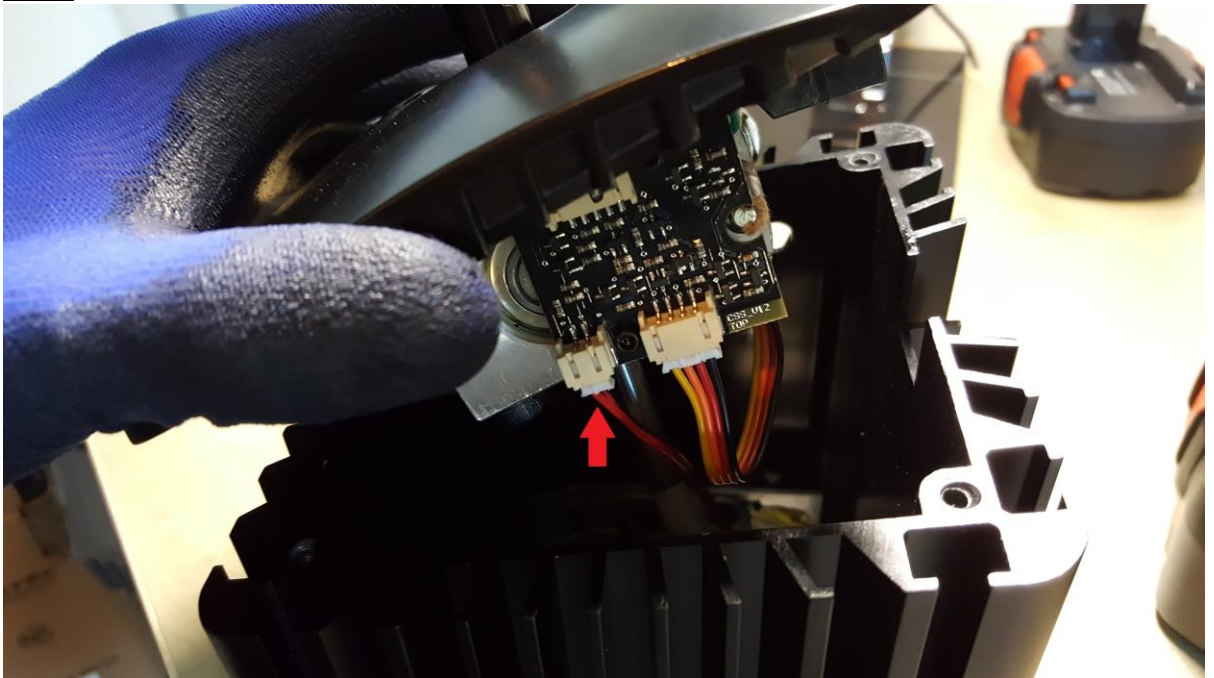


3. Open the three screws to remove the gear plate. Please be careful, they sometimes are a bit tight (Figure C)

Figure C

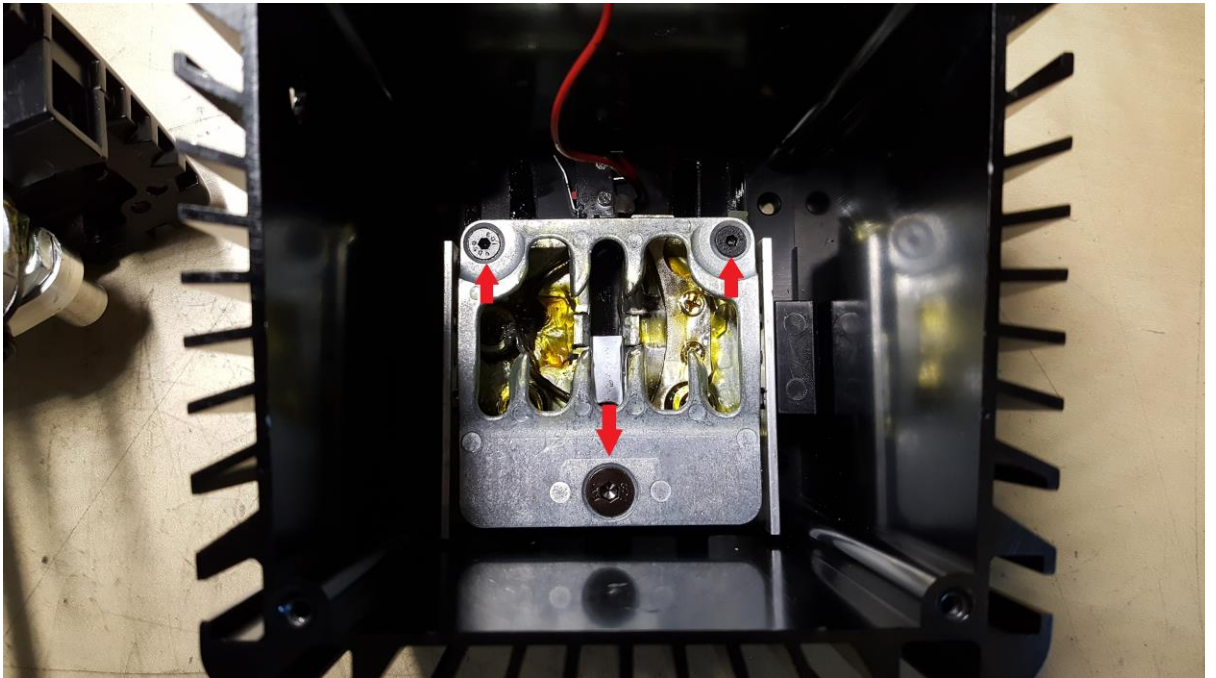


4. Remove the gear plate and open the three screws to remove the broken spring and also the plate which holds the spring in place. Make sure, to remove the lubricant on the screws to avoid that they get stripped (Figure D)

Figure D

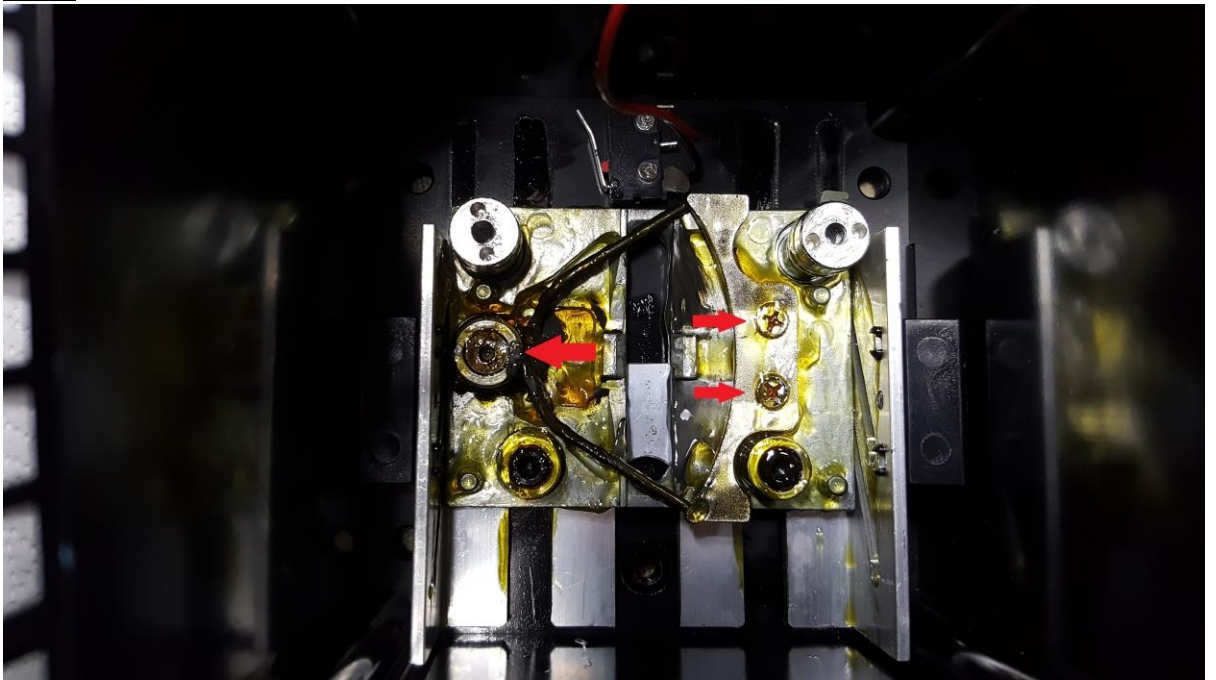


5. Assemble the new spring with the screw on the left to hold it in place (Figure E)

Figure E

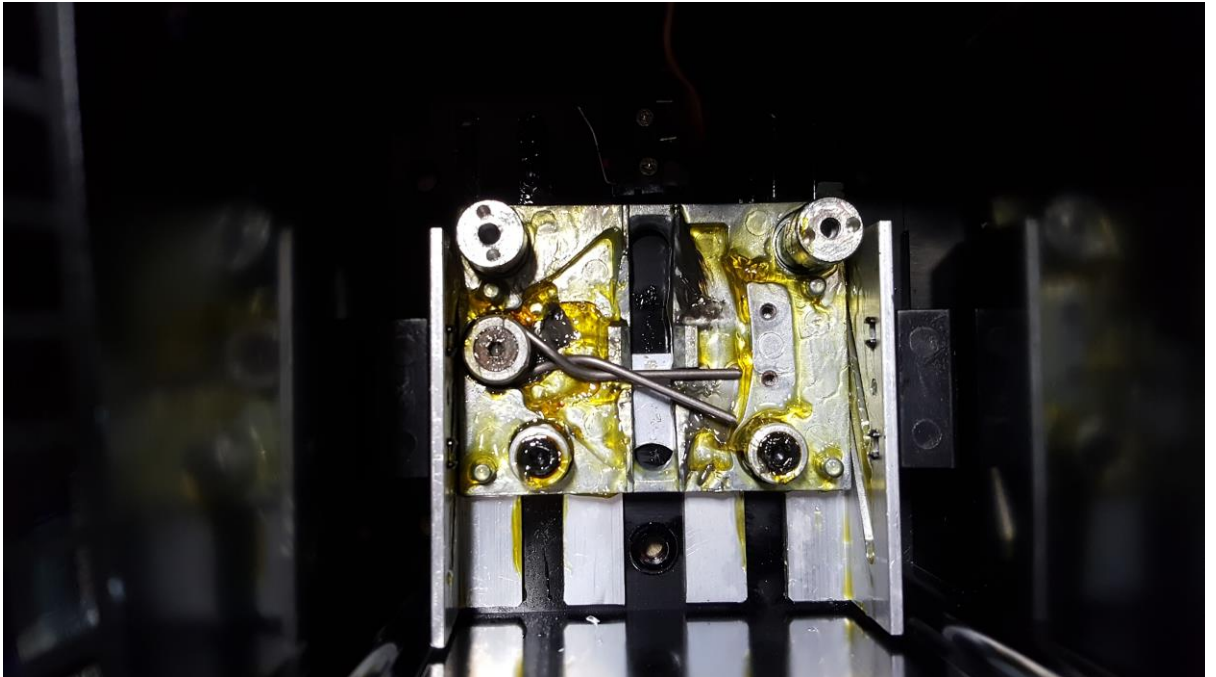

6. Now clamp the spring into its slots and assemble the plate on the right side. It might be a bit fiddly (Figure F)

Figure F

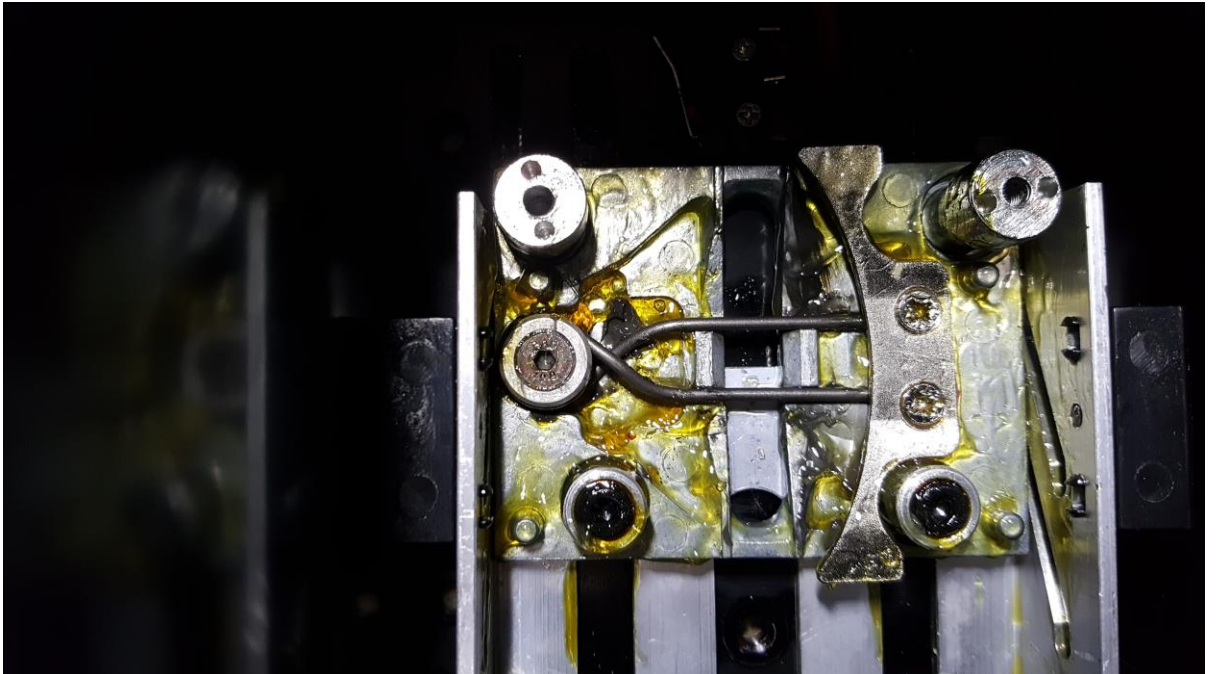

7. Reassemble the gear plate (Figure G) and afterwards you also can reassemble the Shifter plate of the shifter (Figure A). Please make sure to plug in the cable again as shown in Figure B

Figure G

