


# T500RS

## The detachable wheel feels “loose”

When the detachable rim of the T500RS feels loose or wobbly, there are some things that can be checked in order to solve this problem.

- 1) When reinstalling the detachable rim:

Strongly tighten the large central attachment ring, as far as it will go = **this point is very important and is usually the direct cause of the looseness.**

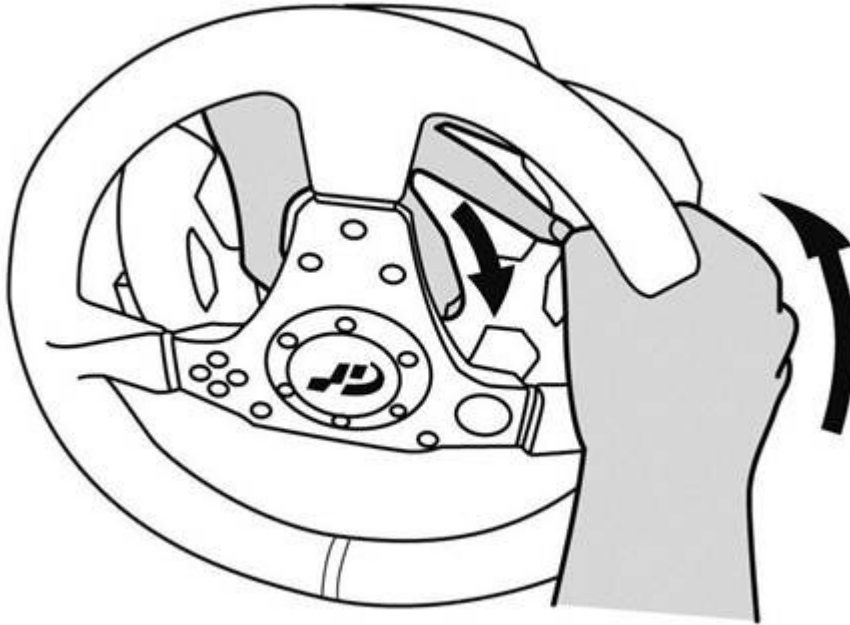

Only after making sure that the central attachment ring is tight, also tighten the small holding screw (taking care not to force or over-tighten the screw).

On the link below you will find a video showing what needs to be done:

<http://www.youtube.com/watch?v=l7cKX6F1ah0>

- 2) As soon as step 1 is complete, if the problem is not solved, please make sure that all of the screws shown in the photos below are tightened:

